

# **DIMDISASSOCIATE command**

2081 GstarCAD MY /KW August 11, 2021 [CAD Commands](#) 0 1330

The **DIMDISASSOCIATE** command is used to remove association of selected dimension.

## **Command Access:**

**Command** : DIMDISASSOCIATE

## **Command Prompts:**

Select dimensions to disassociate::

Select object:

## **Function Description:**

This command could filter selection set and make it only contains associative dimensions on unlocked layers and in current space (for example, if the model space is active, associative dimensions in paper space are excluded), and then it removes association of all dimensions and reports numbers of filtered dimensions and removed dimensions.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimdisassociate-command-2081.html>