

# **DIMOVERRIDE command**

2088 GstarCAD MY /KW August 11, 2021 [CAD Commands](#) 0 980

The **DIMOVERRIDE** command is used to control the override values of system variable in specified dimension.

## **Command Access:**

**Ribbon** : Annotation > Dimension > DIMOVERRIDE

**Menu** : Dimension > Override

**Command** : DIMOVERRIDE

## **Command Prompts:**

Enter dimension variable name to override or [Clear overrides]:

## **Function Description:**

Users could override dimension system variable of selected dimension or clear override of selected dimension object, they could also return to the setting defined by its dimension style.

## **Relative Glossary:**

### **Dimension Variable name to Override:**

Override specified dimension system variable name.

### **Clear Overrides:**

Clear specified overrides and return to the setting defined by its dimension style.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimoverride-command-2088.html>