

# **DIMROTATED command**

2090 GstarCAD MY /KW August 11, 2021 [CAD Commands](#) 0 752

The **DIMROTATED** command is used to create a rotated linear dimension line.

## **Command Access:**

Command: DIMROTATED

## **Command Prompts:**

DIMLINEAR

Specify first extension line origin or <select object>:

Specify second extension line origin:

Specify dimension line location or [Mtext/Text/Angle/Horizontal/Vertical/Rotated]:

## **Relative Glossary:**

### **First extension line origin:**

After specifying the first extension line origin, it will prompt to specify the second extension line origin.

### **Dimension line location:**

After specifying the dimension line location, the dimension will be created.

### **Mtext:**

Edit dimension text by In-place text editor. Users could input special characters and symbols by control code or Unicode character string.

If the unit conversion is off, users could input square bracket ([]) to display them.

The current dimension style determines the appearance of generated measured value.

### **Text:**

Customize dimension text under command prompt.

The generated measured value will be displayed in angle bracket (<>). If the unit conversion is off, users could input square bracket ([]) to display them.

User could reset the dimension style in "Text" option of New, Modify, and Override in Dimension Style Manager Dialog box.

### **Angle:**

Modify angle of dimension text.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimrotated-command-2090.html>