# **DIMROTATED** command

2090 GstarCAD MY /KW August 11, 2021 CAD Commands 0 797

The **DIMROTATED** command is used to create a rotated linear dimension line.

#### **Command Access:**

Command: DIMROTATED

### **Command Prompts:**

#### **DIMLINEAR**

Specify first extension line origin or <select object>:

Specify second extension line origin:

Specify dimension line location or [Mtext/Text/Angle/Horizontal/Vertical/Rotated]:

### **Relative Glossary:**

#### First extension line origin:

After specifying the first extension line origin, it will prompt to specify the second extension line origin.

#### **Dimension line location:**

After specifying the dimension line location, the dimension will be created.

#### Mtext:

Edit dimension text by In-place text editor. Users could input special characters and symbols by control code or Unicode character string.

If the unit conversion is off, users could input square bracket ([]) to display them.

The current dimension style determines the appearance of generated measured value.

# Text:

Customize dimension text under command prompt.

The generated measured value will be displayed in angle bracket (<>). If the unit conversion is off, users could input square bracket ([]) to display them.

User could reset the dimension style in "Text" option of New, Modify, and Override in Dimension Style Manager Dialog box.

# Angle:

Modify angle of dimension text.

Online URL: <a href="https://www.gstarcad.com.my/knowledge/article/dimrotated-command-2090.html">https://www.gstarcad.com.my/knowledge/article/dimrotated-command-2090.html</a>