

## DVIEW command

2107 GstarCAD MY /KW August 12, 2021 [CAD Commands](#) 0 1438

The **DVIEW** command used to define parallel projection or perspective views by using a camera and target.

### Command Access:

**Command entry** : DVIEW

### Command Prompts:

**DView** : [CAmera/TARget/TWist/Distance/POints/Off/Hide/PAn/Zoom/eXit]<eXit>:

**Camera** : Specify a new camera position by rotating the camera around the target point.

**Target** : Specify a new position for the target by rotating it around the camera.

**Twist** : Twist or tilt the view around the line of sight.

**Distance** : Move the camera in or out along the line of sight relative to the target.

**Points** : Using X,Y,Z coordinates to locate the camera and target points.

**Off** : Turn off perspective viewing.

**Hide** : Suppress hidden lines on the selected objects to aid in visualization.

**Pan** : Move the image without changing the level of magnification.

**Zoom** : Increase or decrease the apparent size of objects in the current viewport dynamically when perspective viewing is off .

Online URL: <https://www.gstarcad.com.my/knowledge/article/dview-command-2107.html>