

LIMITS command

2201 GstarCAD MY /KW August 17, 2021 [CAD Commands](#) 0 1073

The **LIMITS** command is used to set up the boundaries of grid and control its display in current model or named layout.

Command Access:

Menu : Format > Drawing Limits

Command : LIMITS

Command Prompts:

Specify lower left corner or [ON/OFF] <0.0000, 0.0000>:

Specify upper right corner <420.0000, 297.0000>:

Regenerating model.

Relative Glossary:

Lower Left Corner:

Specify the lower left corner of grid limits.

On : Turn on the limits checking. In the ON mode, users could not input a point outside of limit. For points inside of grid could be checked.

OFF : Turn off the limits checking and keep the current value to be checked next time.

Online URL: <https://www.gstarcad.com.my/knowledge/article/limits-command-2201.html>