

LTSCALE command

2211 GstarCAD MY /KW August 17, 2021 [CAD Commands](#) 0 1093

The **LTSCALE** command is used to set the linetype scale of the whole drawing.

Command Access:


Command : LTSCALE

Command Prompts:

Enter new linetype scale factor: <1.0000>:

Command Prompts:

Changes of linetype scale will lead to drawing regeneration. They will be applied on all objects in drawing

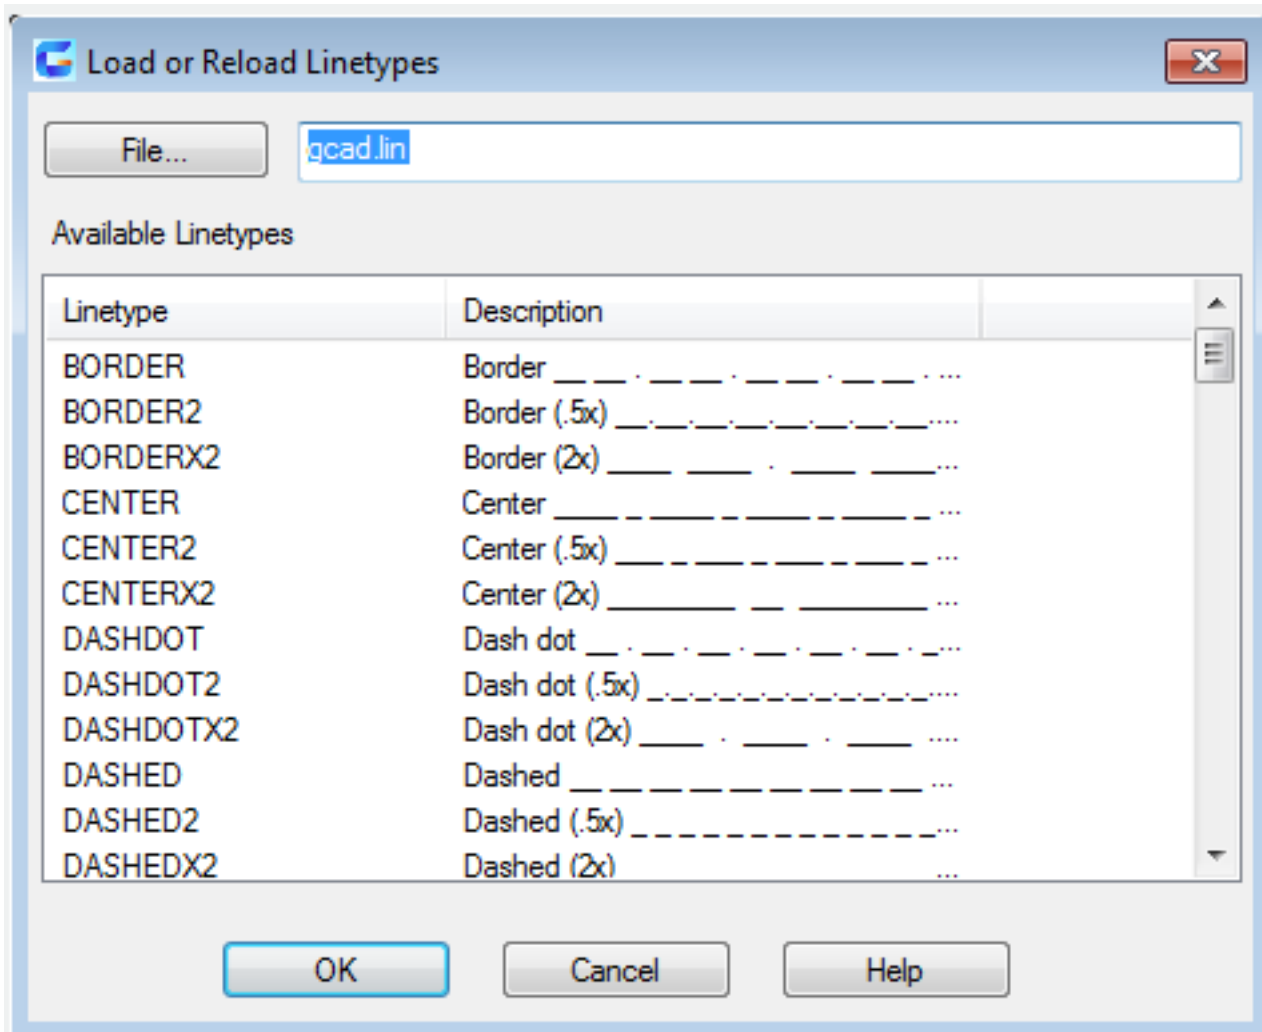

Online URL: <https://www.gstarcad.com.my/knowledge/article/ltscale-command-2211.html>