

MLEADERALIGN command

2232 GstarCAD MY /KW April 15, 2022 [CAD Commands](#) 0 1081

The **MLEADERALIGN** command is used to align and space selected multileaders.

Command Access:

Ribbon : Annotation > Leader > MLEADERALIGN

Menu : Modify > Object > Multileader > Align

Command : MLEADERALIGN


Command Prompts:

Select Multileader: Current mode: Use current spacing Select multileader to align to or [Options]:

Specify direction: :

Function Description:

After selecting Multileaders, users should specify a multileader that used to align to selected multileaders.

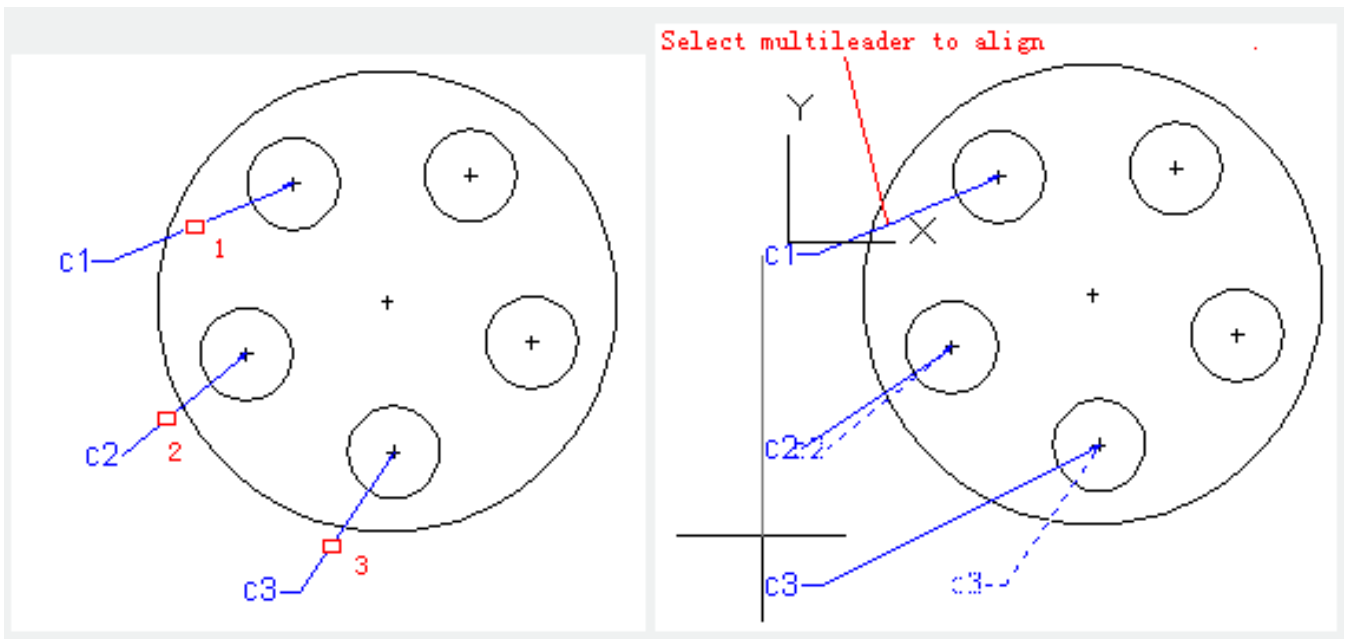

Relative Glossary:

Options:

Specify one option to align and space multileaders.

Distribute : Distribute multileaders between two selected points.

make leader segments Parallel : Align all selected multileaders and make them parallel to selected one.

specify Spacing : Specify the spacing between selected multileaders.

Use current spacing : Specify spacing by using current spacing.

Related tutorial video:

- [Mleaderstyle command](#) 00:28
- [Mleader command](#) 02:03
- [Use grips to edit objects](#) 04:07
- [Mleaderedit](#) 04:46
- [Mleaderalign](#) 05:37

Above video sources from [TUTORIAL - GETTING STARTED WITH GSTARCAD](#), enrol now for free.

Online URL: <https://www.gstarcad.com.my/knowledge/article/mleaderalign-command-2232.html>