

MLEADERCOLLECT command

2233 GstarCAD MY /KW August 18, 2021 [CAD Commands](#) 0 1166

The **MLEADERCOLLECT** command is used to arrange selected multileaders in line or column and display the result by a single leader. The selected multileaders should contain blocks.

Command Access:

Ribbon : Annotation > Leader > MLEADERCOLLECT

Menu : Modify > Object > Multileader > Collect

Command : MLEADERCOLLECT

Command Prompts:

Specify collected multileader location or [Vertical/Horizontal/Wrap]:


Function Description:

After selecting Multileaders, users could specify its new position.

Relative Glossary:

Collected multileader location : The point that is used to specify multileader location is located on the top left corner of collected multileader.


Vertical : Place multileader set in a column or multiple columns.

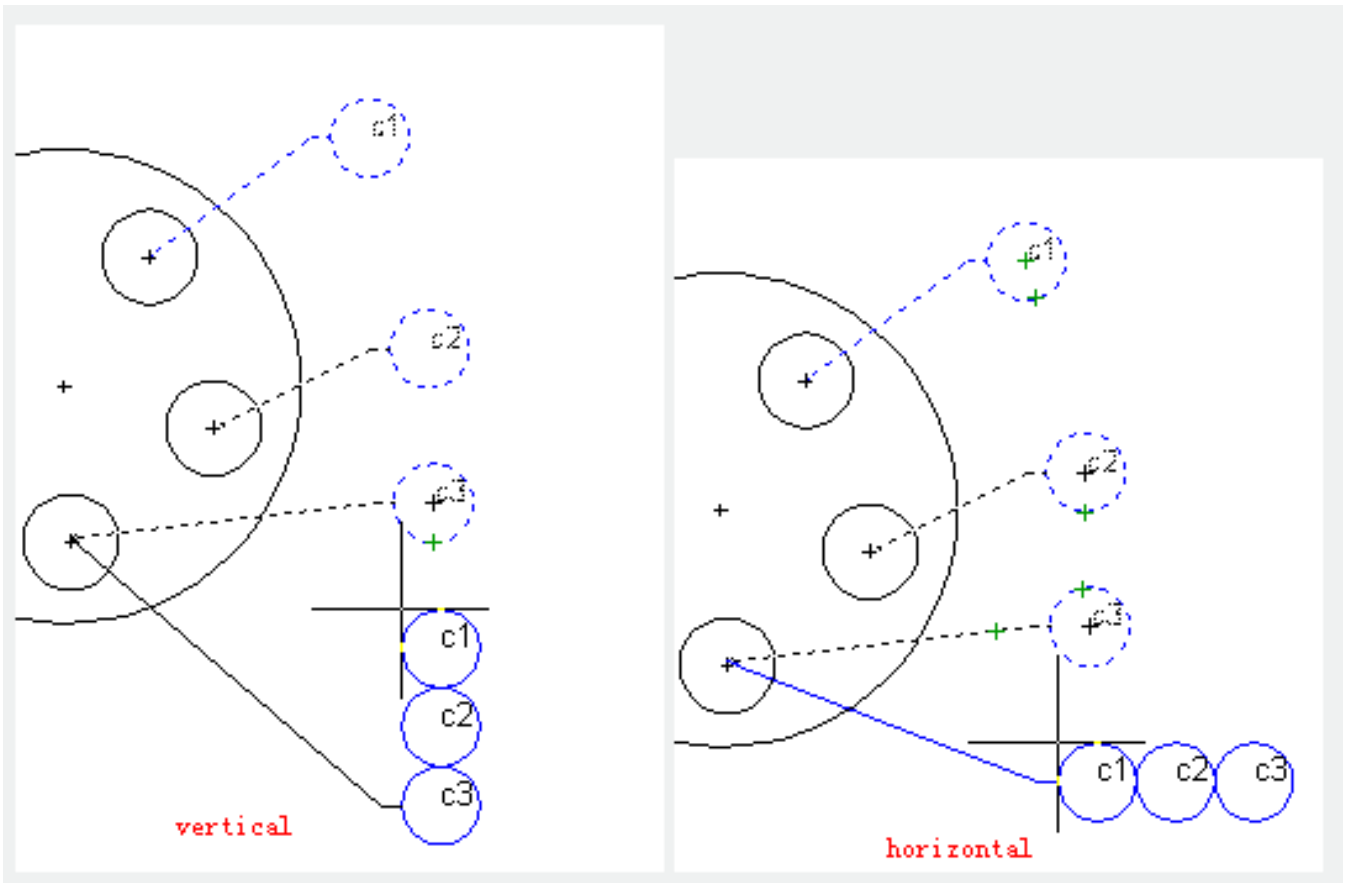


Horizontal : Place multileader set in a row or multi-row.

Wrap : Specify the width for wrapping multileader set.

Specify wrap width : Specify the width for wrapping

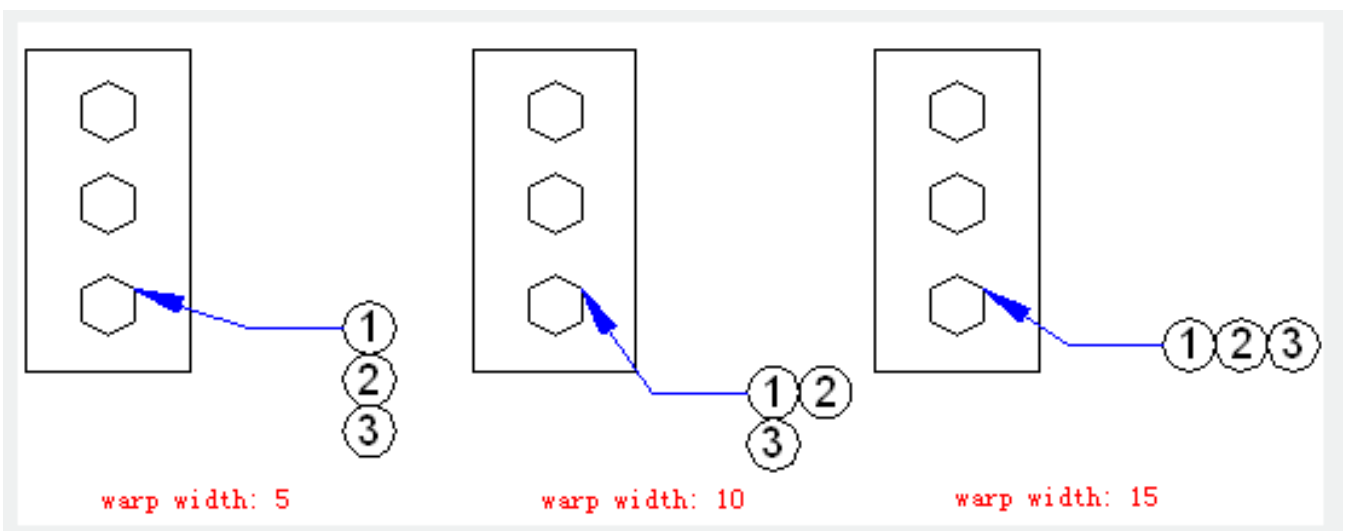

Number: Specify the max number of blocks in a row for multileader.

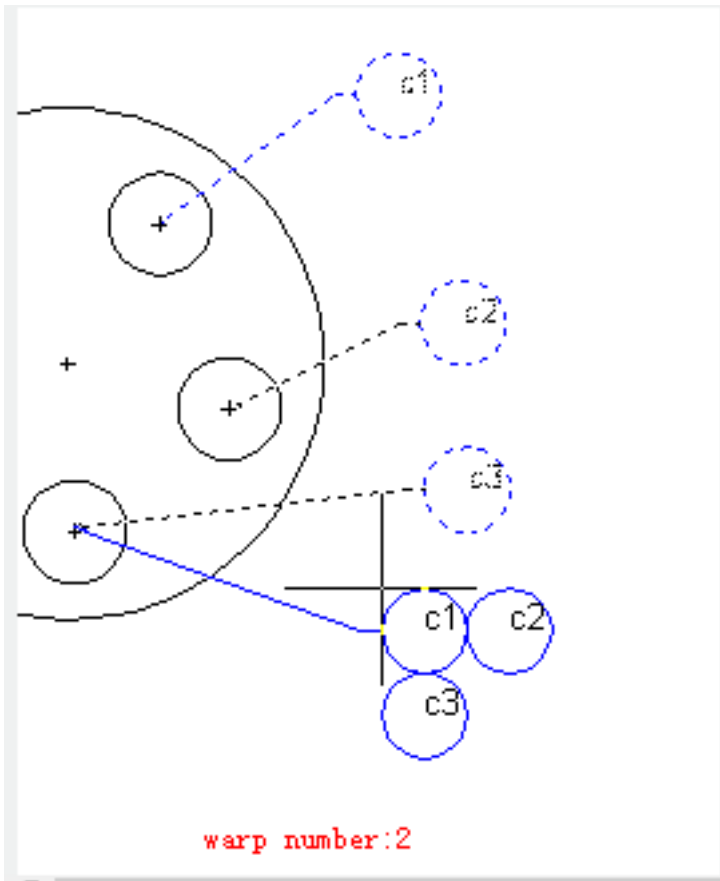

Online URL: <https://www.gstarcad.com.my/knowledge/article/mleadercollect-command-2233.html>