

## **REDRAWALL command**

2318 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 1142

The **REDRAWALL** command is used to refresh display of all viewports.

### **Command Access:**

**Command :** REDRAWALL

### **Function Description:**

This command could remove temporary files left by the VSLIDE command or some other operations. Users could remove scattered pixels by the REGENALL command.

Online URL: <https://www.gstarcad.com.my/knowledge/article/redrawall-command-2318.html>