

REINIT command


2326 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 998

The **REINIT** command is used to reinitialize digitizer, IO ports of digitizer and program parameter files.

Command Access:

Command : REINIT

Function Description:

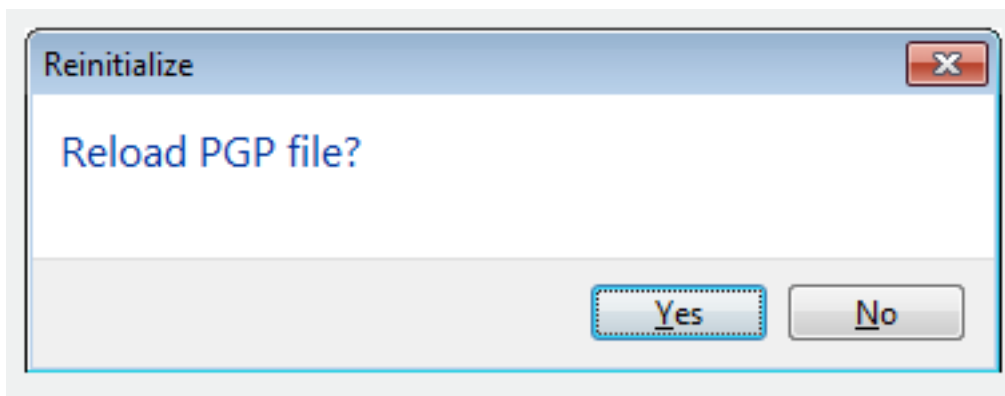

Online URL: <https://www.gstarcad.com.my/knowledge/article/reinit-command-2326.html>