

## REINIT command


2326 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 978

The **REINIT** command is used to reinitialize digitizer, IO ports of digitizer and program parameter files.

**Command Access:**

**Command :** REINIT

**Function Description:**

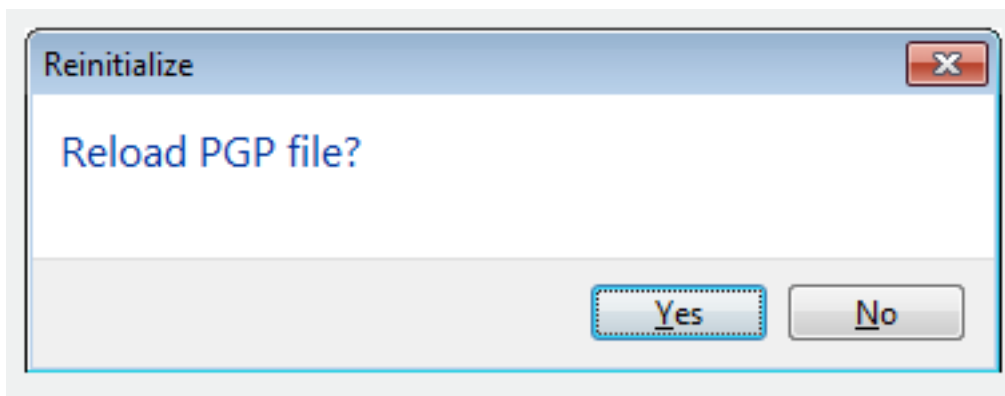

Online URL: <https://www.gstarcad.com.my/knowledge/article/reinit-command-2326.html>