

## **RESETBLOCK command**

2330 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 796

The **RESETBLOCK** command is used to reset one or more dynamic block references to default value of block definitions.

### **Command Access:**

**Command** : RESETBLOCK

**Shortcut** : select one dynamic block reference, right-click and select "Ret block"

### **Command Prompts:**

Select object:

Online URL: <https://www.gstarcad.com.my/knowledge/article/resetblock-command-2330.html>