

RESETBLOCK command

2330 GstarCAD MY /KW August 20, 2021 [CAD Commands](#) 0 795

The **RESETBLOCK** command is used to reset one or more dynamic block references to default value of block definitions.

Command Access:

Command : RESETBLOCK

Shortcut : select one dynamic block reference, right-click and select "Ret block"

Command Prompts:

Select object:

Online URL: <https://www.gstarcad.com.my/knowledge/article/resetblock-command-2330.html>