

# TCOUNT command

2384 GstarCAD MY /KW August 24, 2021 [CAD Commands](#) 0 1843

The **TCOUNT** command is used to add sequential numbering to text objects. The numbering can appear as a prefix, suffix or replacement text. After selecting one or multiple texts, you can set the text sorting method, the starting number and increment of text sorting and generated numbers placement mode.

## Command Access :

**Menu** : Text >Automatic Text Numbering

**Command Entry** : TCOUNT

## Operation steps:

- 1.Start the command.
- 2.Select TEXT, MTEXT or ATTDEF objects:
- 3.Sort selected objects by [X/Y/Select-order]

X : Places numbers by increasing the x-coordinate value of the selected text.

Y : Places numbers by decreasing the y-coordinate value of the selected text.

Select-order: Places numbers according to the order in which the text was selected.

After specifying the method of order, the following prompts will be displayed in the command line:

4.Specify starting number and increment (Start increment) <1,1>: Enter the starting number and increment, separated by a comma, or press ENTER

**Note:** Negative increments (decrements) are supported. Precede decrements with a minus sign.

5.Specify the placement of numbers in text [Overwrite/Prefix/Suffix/Find&replace..] < Prefix>:, Enter an option or press ENTER

Overwrite: Replaces selected text strings with numbers

Prefix: Adds the number as a prefix to text

Suffix: Adds the number as a suffix to text

Find&replace: Replaces a user specified text string with a number

Usage Example:

1. Starting number = 1, increment = 1 added as prefix:

*Number one*

*Number two*


*Number three*

**1** *Number one*

**2** *Number two*

**3** *Number three*

2. Starting number = 20, increment = -10 added as suffix:

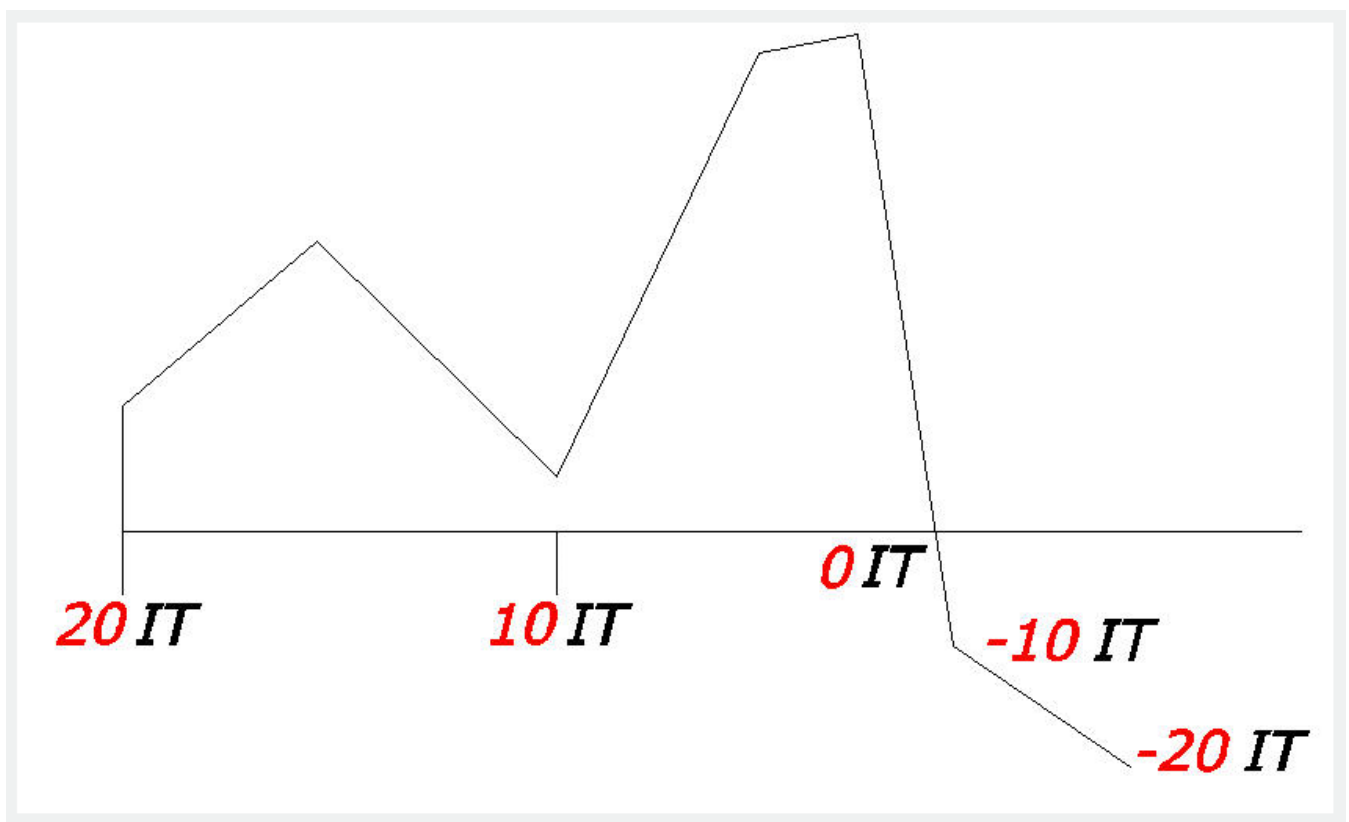

3. Starting number = 2, increment = 2, Overwrite:

**2**  
**4**  
**6**  
**8**  
**10**

Online URL: <https://www.gstarcad.com.my/knowledge/article/tcount-command-2384.html>