

## TEXTFIT command

2388 GstarCAD MY /KW August 24, 2021 [CAD Commands](#) 0 1317

The **TEXTFIT** command is used to stretch or shrink text object(s) by selecting new start and/or end points.


**Command Access :**

**Command Entry :** TEXTFIT


**Menu :** Text>Text Fit

Command line prompts as follow:

Select Text to stretch/shrink:

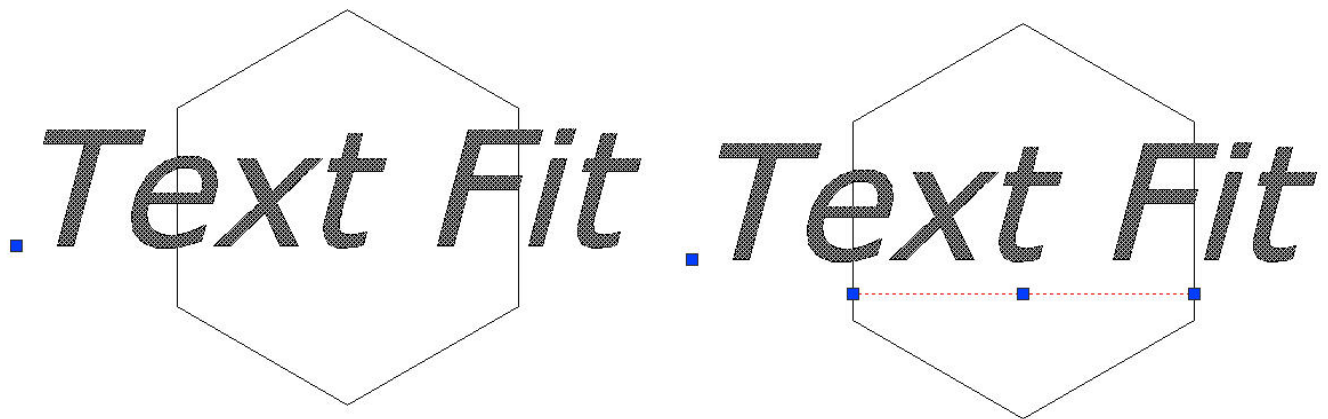

Specify end point or [Start point]: Specify a new end point, or enter S to specify a new start point.

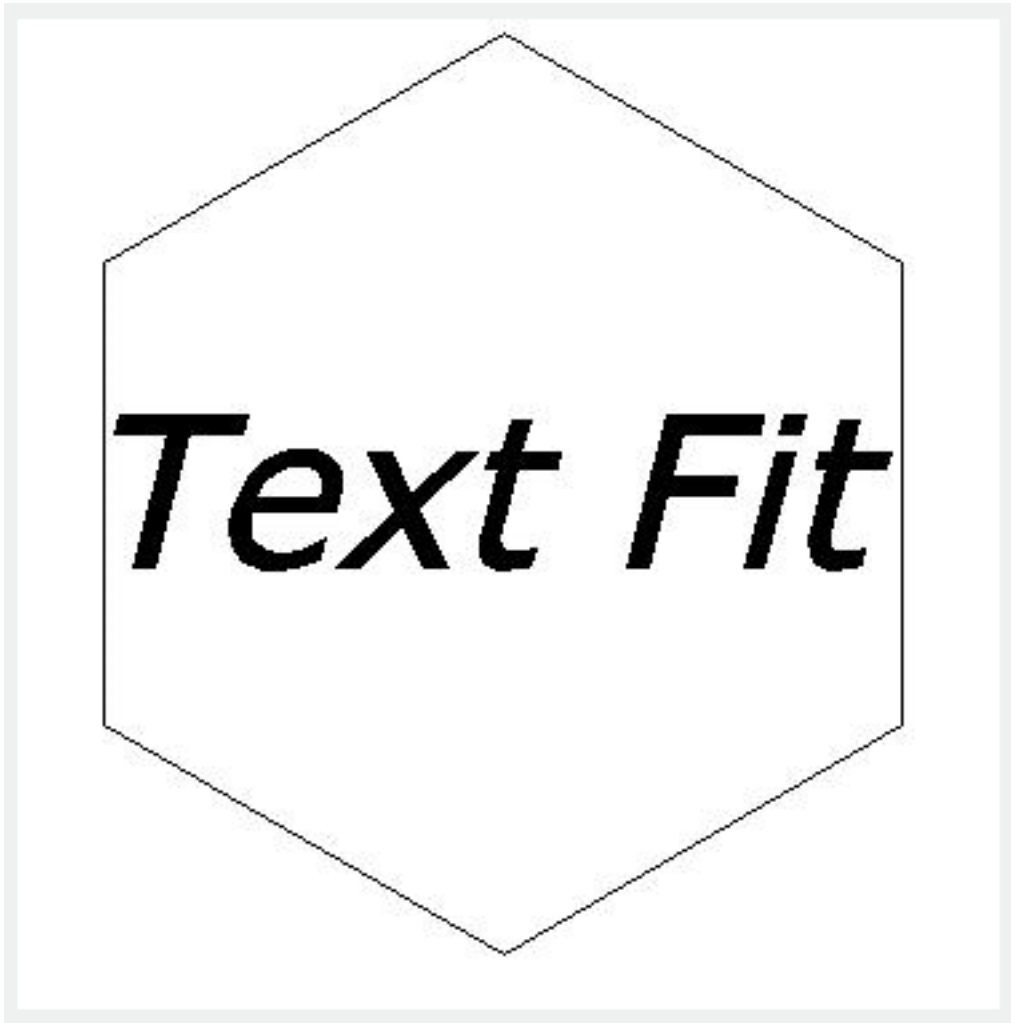

**Note:** The default uses the text's justification as the start point. If a new start point is specified, prompts are displayed to specify new points.

Online URL: <https://www.gstarcad.com.my/knowledge/article/textfit-command-2388.html>