

## Define a Parallel Projection

2466 GstarCAD MY /KW August 30, 2021 [Workflow](#) 0 1002

**To specify a point or angle in a model space, you can**

- Choose a preset 3D view from the View toolbar.
- Enter a coordinate or angles that represent your viewing location in 3D.
- Change to a view of the XY plane of the current [UCS](#) , a saved UCS, or the WCS.
- Change the 3D view dynamically with your pointing device.
- Set front and back clipping planes to limit the objects being displayed.

Viewing in 3D is only available in model space. You cannot use 3D viewing commands like [VPOINT](#) , [DVIEW](#) or [PLAN](#) when you are working in paper space, the view in paper space is always a plan view

Online URL: <https://www.gstarcad.com.my/knowledge/article/define-a-parallel-projection-2466.html>