

# Display Lineweights

2486 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 1027

You can turn on and off Lineweights in a drawing use the LWT on the status bar . The plotting of lineweights is not affected by this setting.



In model space, a 0-value [LWEIGHT](#) is displayed as one pixel. Regeneration time increases with lineweights that are represented by more than one pixel. When you work on a complex drawing, it is recommended to turn off the display of lineweights to improve the performance.

## Display Lineweights in Model Space

In model space, the Lineweight does not change with the zoom factor. For example, a lineweight value is represented by a width of four pixels, it is always displayed using four pixels, it does not matter how far you zoom in.

## Display Lineweights in plot previews

In plot previews, Lineweights are displayed in real-world units, and the lineweight display changes with the zoom factor. You can use the plot style to apply different joints and endcap styles to objects with lineweights.

Online URL: <https://www.gstarcad.com.my/knowledge/article/display-lineweights-2486.html>