

## Change the Lineweight of an Object

2488 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 847

To change the [LWEIGHT](#) of an object, you can do :

- If an object's lineweight is set to BYLAYER, move it to another layer with a different lineweight, the object will acquire the lineweight of the new layer.
- If an object's lineweight is set to BYLAYER, you can modify the lineweight of the layer the object is on.
- Choose another lineweight for an object..

If you change the current lineweight setting on the Properties toolbar from BYLAYER to a specific lineweight, all newly created object's lineweight will be set to the new lineweight.

Online URL:

<https://www.gstarcad.com.my/knowledge/article/change-the-lineweight-of-an-object-2488.html>