


# Grid and Snap Space

2497 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 1013

To improve drawing efficiency, you can display a rectangular grid and snap it. You can also control its spacing, type and behavior.

The grid helps you align objects and determine the distances between them. When [SNAP](#) mode is on, the movement of the crosshairs is restricted to grip point. [GRID](#) mode just control the display of grid line or point. If snap mode is on, it works whenever the grid line is displayed or not. They are often turned on at same time.

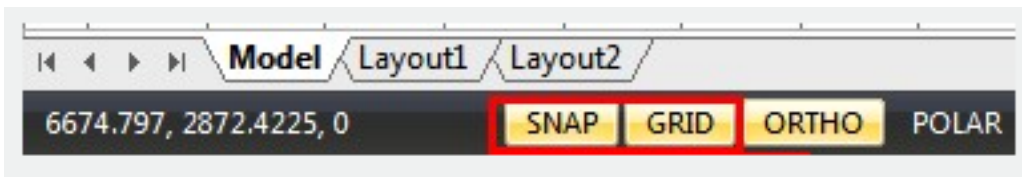

## Set Grid and Snap Spacing

You can set the spacing of grid and snap, and the settings do not have to match. Darker lines called major line display at intervals, you can change the spacing of major line.

## Change Snap type

If you want to draw a isometric drawing of 3D object, you can switch snap type to Isometric.

Online URL: <https://www.gstarcad.com.my/knowledge/article/grid-and-snap-space-2497.html>