

# Modify Text

2560 GstarCAD MY /KW November 9, 2021 [Workflow](#) 0 771

All text objects can be moved ([MOVE](#)) , rotated ([ROTATE](#)), deleted and copied ([COPY](#)) just like any other objects. You can also edit the contents of the created text objects.

## Modify single line text

There are two ways for the single line text modification:

- When only Modify text contents, you can double click or use the [DDEDIT](#) command.
- If you want to modify text content and format, you can use the [PROPERTIES](#) palette (Ctrl+1).

## Modify multiline text

You can double-click the texts, then open [MTEXT](#) Editor, in this dialog box you can modify and edit the multiline text. You can resize or relocate mtext by dragging the grip.

## Find and Replace

Using the [FIND](#) command , you can find and replace the words of single-line text and mtext.

## Modify leader text

You can adjust the [LEADER](#) size with the [STRETCH](#) , [SCALE](#) operation.

Online URL: <https://www.gstarcad.com.my/knowledge/article/modify-text-2560.html>