

## **Change Text Height/Width/Angle/Position**

2651 GstarCAD MY /KW November 12, 2021 [Workflow](#) 0 1078

This function is used to modify text height, text width, text angle and text position. You can click or select characters by window selection.

**Menu** : Express>Text Tools>Others>Change Text Height/Width/Angle/Position

**Command Entry** : TXTHEI/TXTWID/TXTANG/TXTPOS

Online URL:

<https://www.gstarcad.com.my/knowledge/article/change-text-height-width-angle-position-2651.html>