

## Delete Row

2704 GstarCAD MY /KW December 2, 2021 [Workflow](#) 0 864


This function can delete the row of the table you specified.

**Menu** : Express>Table Tools>Delete Row

**Command Entry** : BGSB

### Operation steps:

1. Start the command.
2. Specify the cell of row for delete.

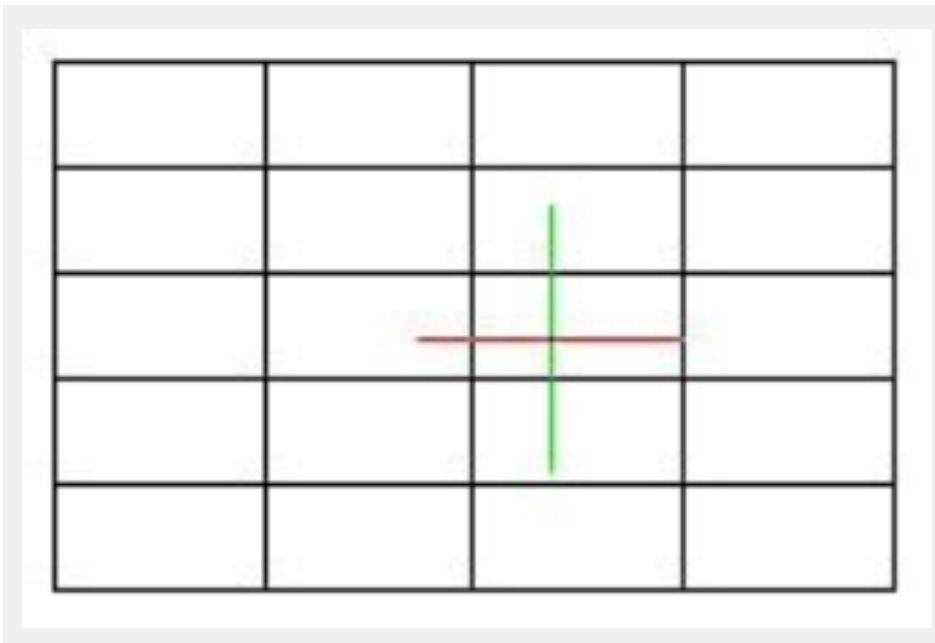

3. System will delete the row you specified, as shown below.


Online URL: <https://www.gstarcad.com.my/knowledge/article/delete-row-2704.html>