

# Dimtoffset command

2739 GstarCAD MY /KW April 15, 2022 [Workflow](#) 0 969

## Function Description:

The DIMTOFFSET system variable is used to control the gap between the dimension line and the dimension text, if the space above the arrows is not enough for the dimension text when you place the dimension below or right the objects, the text is placed downward.

**Type** : Integer

**Saved in** : Drawing

**Initial value** : 1

**Range** : 0,1

## System Variable Value:

**0** : the gap between dimension text and dimension line keeps same

**1** : the same as AutoCAD

---

## Related tutorial video:

- [Dimstyle command](#) 00:27
- [Dimlinear command](#) 02:29
- [Menus and Shortcut Menus](#) 02:41
- [Dimaligned command](#) 02:51
- [Dimangular command](#) 03:11
- [Dimarc command](#) 03:19
- [Dimradius command](#) 03:31
- [Dimdiameter](#) 03:41
- [Dimcontinue command](#) 04:08
- [Dimbaseline command](#) 04:46
- [Dimcenter](#) 05:07
- [QDIM command](#) 05:30
- [Menus and Shortcut Menus](#) 07:05
- [Properties command](#) 07:08
- [Propertiesclose command](#) 07:08
- [Dimbreak command](#) 07:43
- [Menus and Shortcut Menus](#) 08:34
- [Dimreassociate command](#) 08:52

- [Dimtoffset command](#) 09:19
- [Dimregen command](#) 09:29

Above video sources from [TUTORIAL - GETTING STARTED WITH GSTARCAD](#), enrol now for free.

Online URL: <https://www.gstarcad.com.my/knowledge/article/dimtoffset-command-2739.html>